


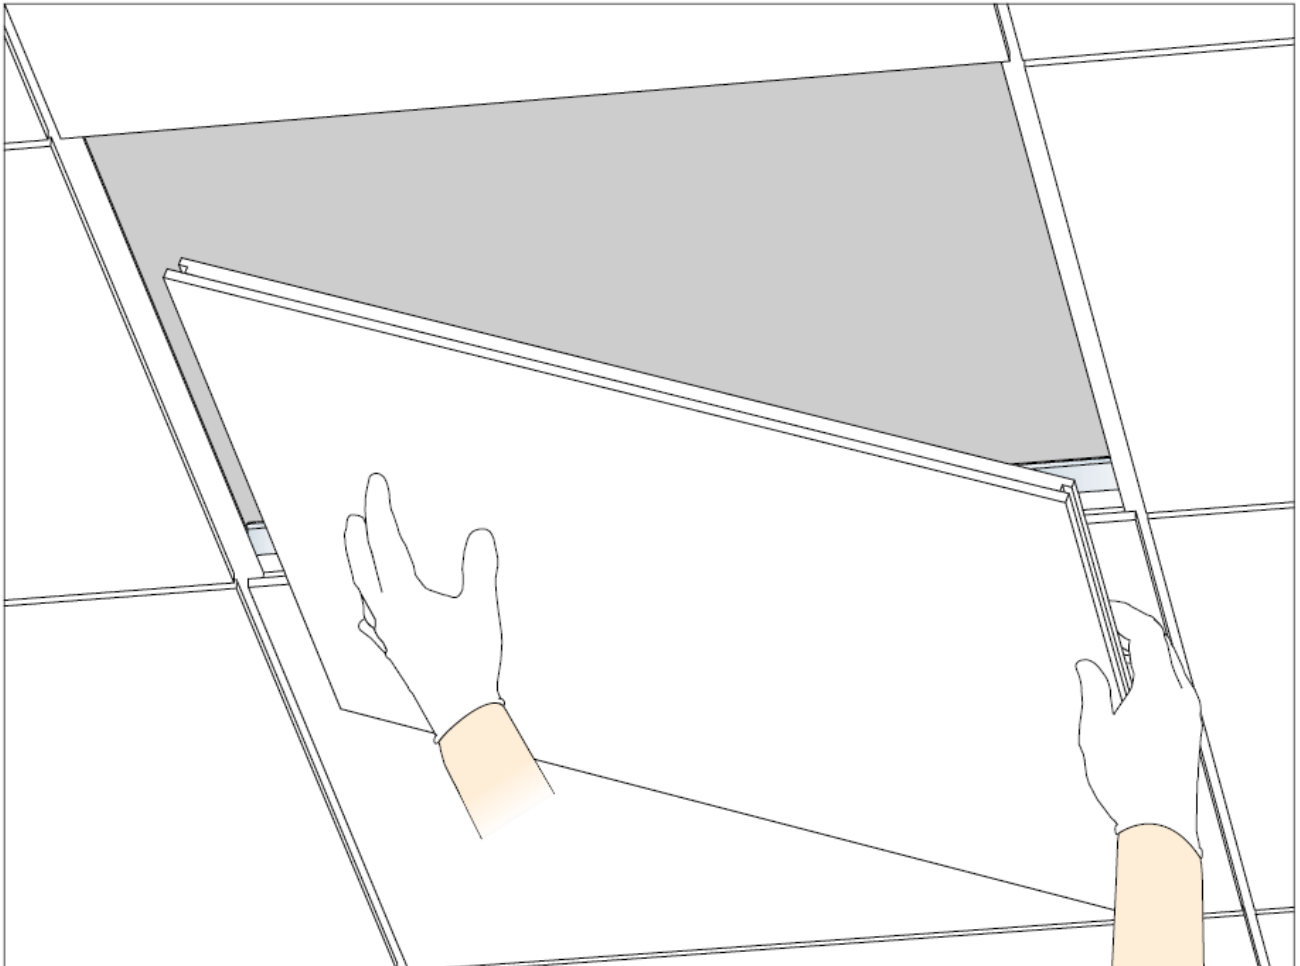


CertainTeed Ceilings Ecophon® Focus™ DG Accessibility Guide

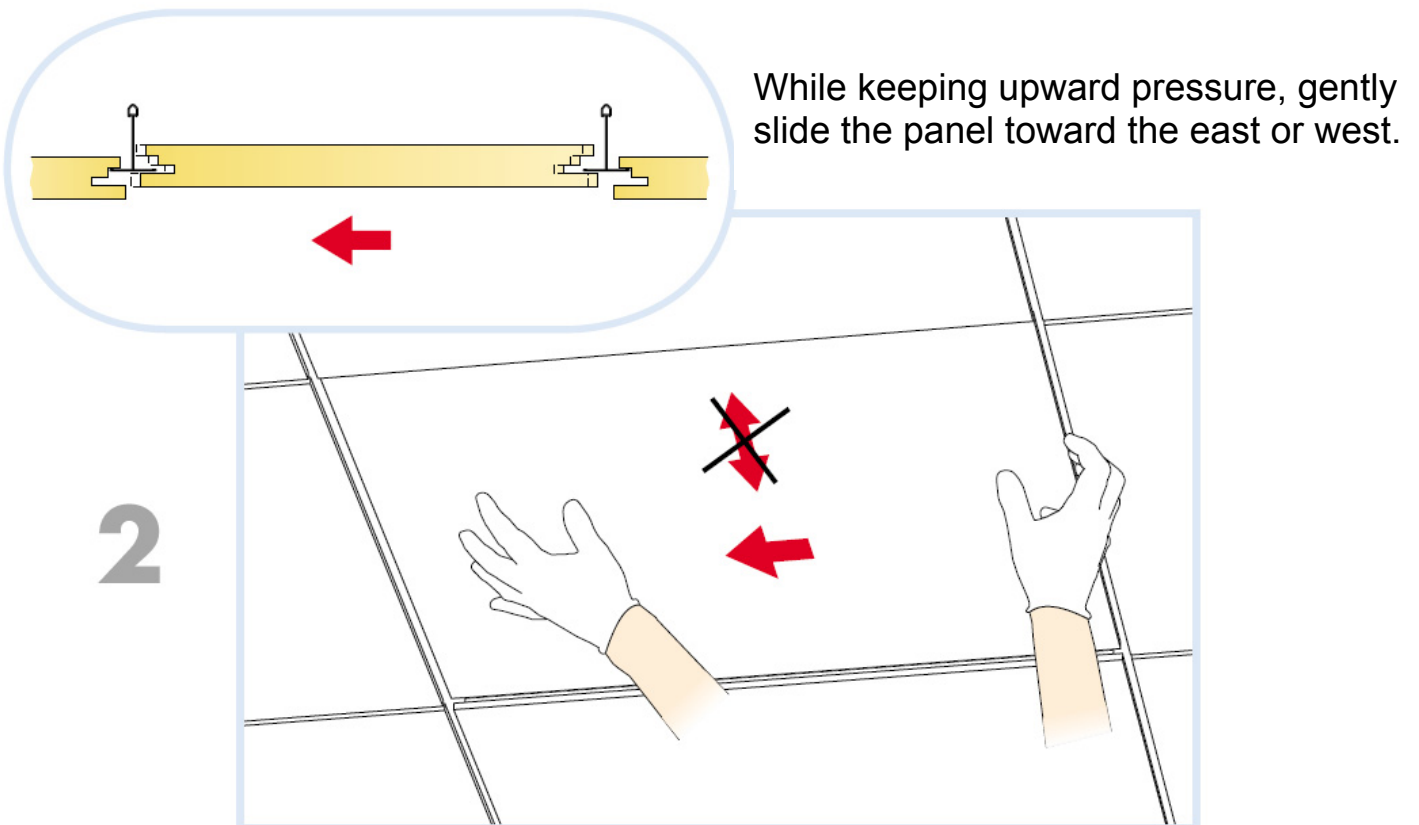

To remove CertainTeed Ceilings Ecophon Focus DG panels, use white cotton gloves and follow the directions. Larger panels may require two people.

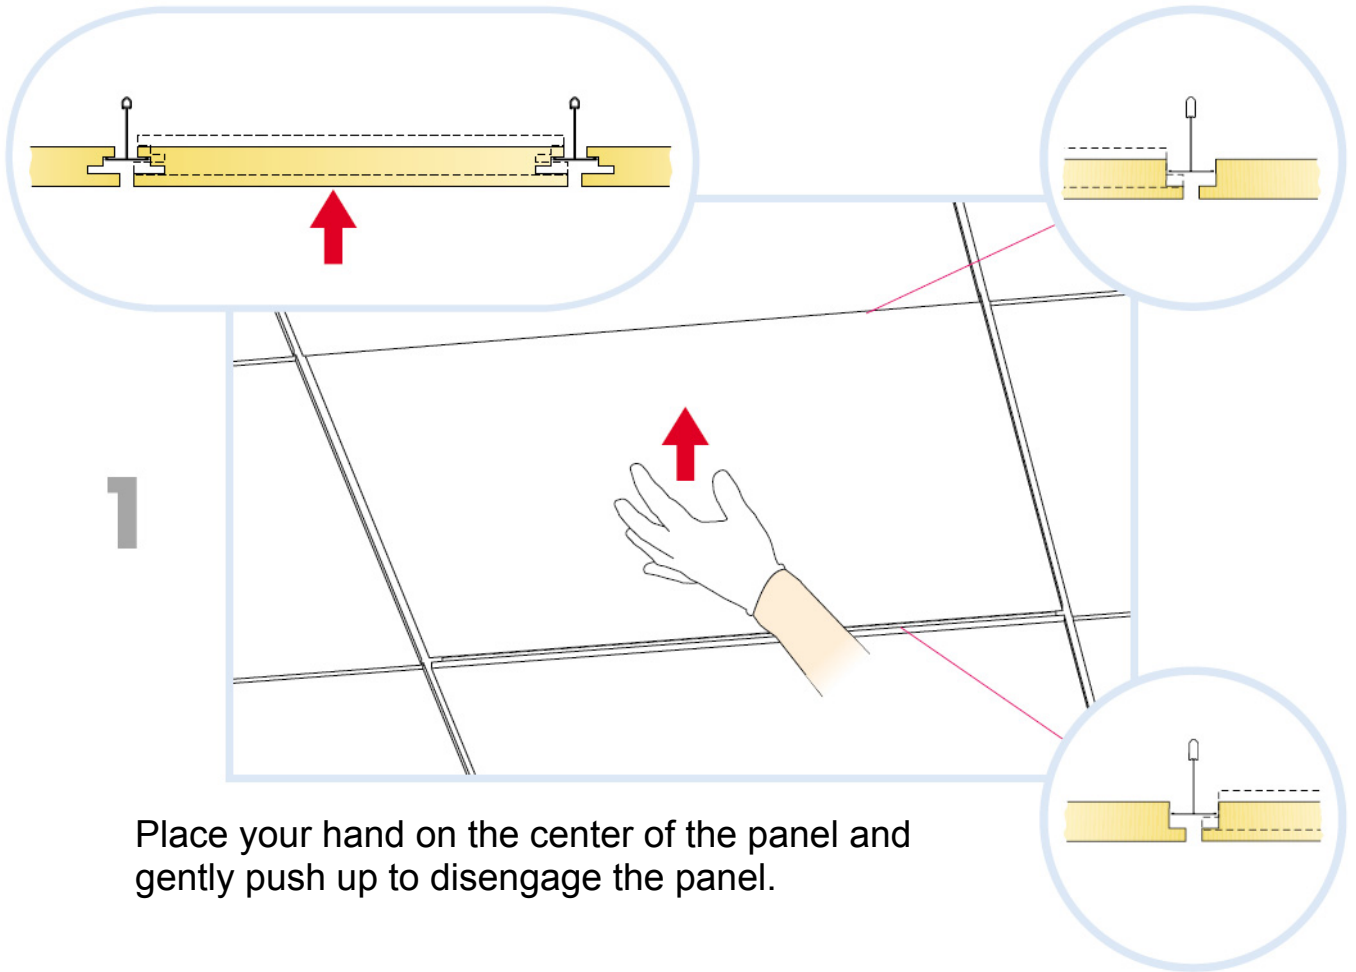

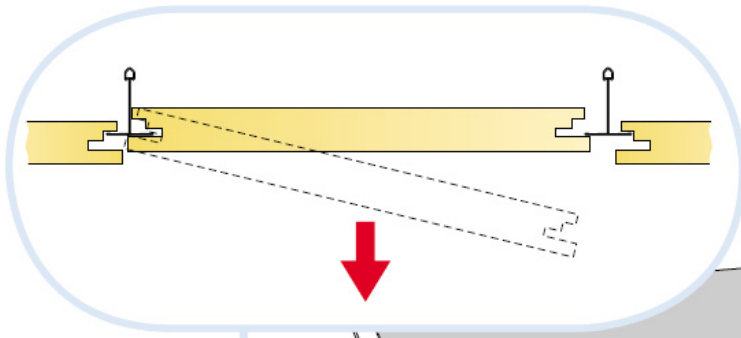

The panel will disengage as illustrated.

3

