

Real Wood Veneer

Delivery, Storage, and Handling Instructions

Site Conditions:

Hunter Douglas Wood Panel products and components must be delivered, stored and installed in conditioned space where building is enclosed. HVAC systems must be functioning and in continuous operation. Wood panels must be acclimatized prior to installation. Wood panels must reach room temperature and have a stabilized moisture content for a minimum of 72 hours prior to installation. Relative humidity between 25% and 55% and temperatures between 50oF and 86oF must be maintained throughout the life of the product.

Storage and Handling:

Wood panels and components must be stored in a dry interior location and remain in cartons prior to installation. Cartons must be stored in a flat, horizontal position. Do not store in unconditioned spaces with humidity greater than 55% or lower than 25% RH and temperatures lower than 50oF or greater than 86oF. Panels must not be exposed to extreme temperatures.