


Snap-On Corner Post Base and Cap

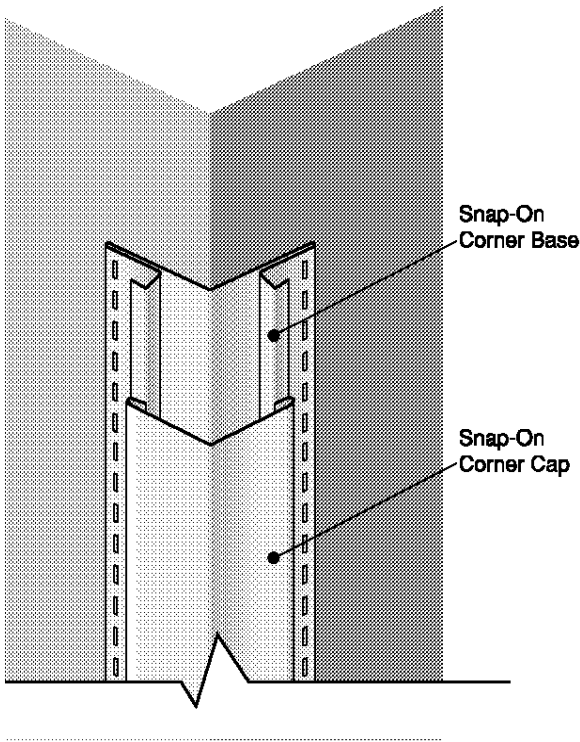

The snap-on corner consists of a base (available in 10' lengths) and corner cap (available in 20' lengths). Installation is easy using the following steps:

NOTE: make sure the corners are properly flashed.

1) Measure and cut the base to the correct length. Remember to leave a 1/4" gap at the top and 3/4" at the bottom (see page 33).

NOTE: if using a 20' corner for a two-story building, you have to stack the bases, leaving a 1/2" gap between them.

2) Nail the base to the house. On each side, locate the first nails at the upper edge of the topmost nailing slots. That allows the corner to hang from the nails. Continue nailing, working from side to side (not down one side then the other). Position nails in the center of nailing slots. Do not nail tight.

3) Measure and cut the corner cap. Remember to leave room for expansion.

4) Snap the corner cap over the base by inserting one side of the cap over the base. Starting from the bottom or top, snap the other side into the base working your way up or down until the cap is completely snapped into place.

5) To prevent the corner from sliding down, install pop rivets at the top of the assembly, one rivet or screw on each side. The rivets or screws should go through both the corner cap and the base.