

This detail depicts the weatherproofing protection and does not represent lightning protection design.

**Tape (Recommended)**

Tape off desired edges for clean detail aesthetic.

**Polyester Reinforcement Preparation (Recommended)**

Prepare SmartFlash ONE Reinforcements prior to applying any resin. Cut 6" width SmartFlash ONE Reinforcement to appropriate lengths. Reinforcement shall extend 6" beyond edge of Terminal. Reinforcement shall overlap 2" anywhere an overlap occurs.

**First Waterproofing Coat**

Using a paint brush, roller or trowel for resin application,

apply approximately 30 mils of wet resin to the Cap Sheet.


Immediately lightly press Reinforcement into wet resin; saturate and coat Reinforcement with resin, including overlaps, such that no Reinforcement is visible. Allow to dry 2-3 hours (assumes 70°F or 20°C).

**Second Waterproofing Coat**

Apply approximately 30 mils of wet resin to entire surface covered by first coat.

**Granules (Optional)**

If desired, broadcast granules into the second waterproofing coat before it forms a skin.

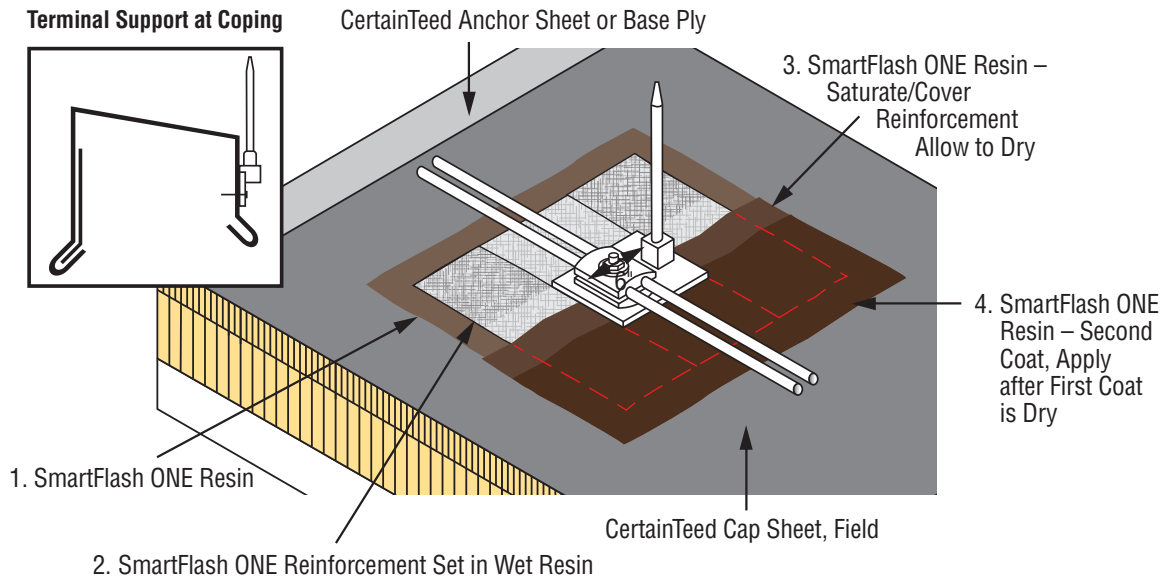

NOT DRAWN TO SCALE