

The substrate shall be clean and free of loose or flaking materials prior to application of SmartFlash ONE.

**First Waterproofing Coat**

Using a paint brush, roller or trowel for SmartFlash ONE Resin, apply approximately 30 mils of wet resin to the substrate, extending a minimum 4" (100 mm) beyond deficiency in all directions. Immediately lightly press SMARTFAB™ 500 Reinforcement into wet resin ensuring that the polyester is free of all air pockets and wrinkles; Reinforcement shall be a minimum 6" width positioned to


extend a minimum 3" beyond deficiency in all directions; saturate and coat Reinforcement with resin such that no Reinforcement is visible.

**Second Waterproofing Coat**

Apply approximately 30 mils of wet resin to entire surface.

**Granules (Optional)**

If desired, broadcast granules into the second waterproofing coat before it forms a skin.

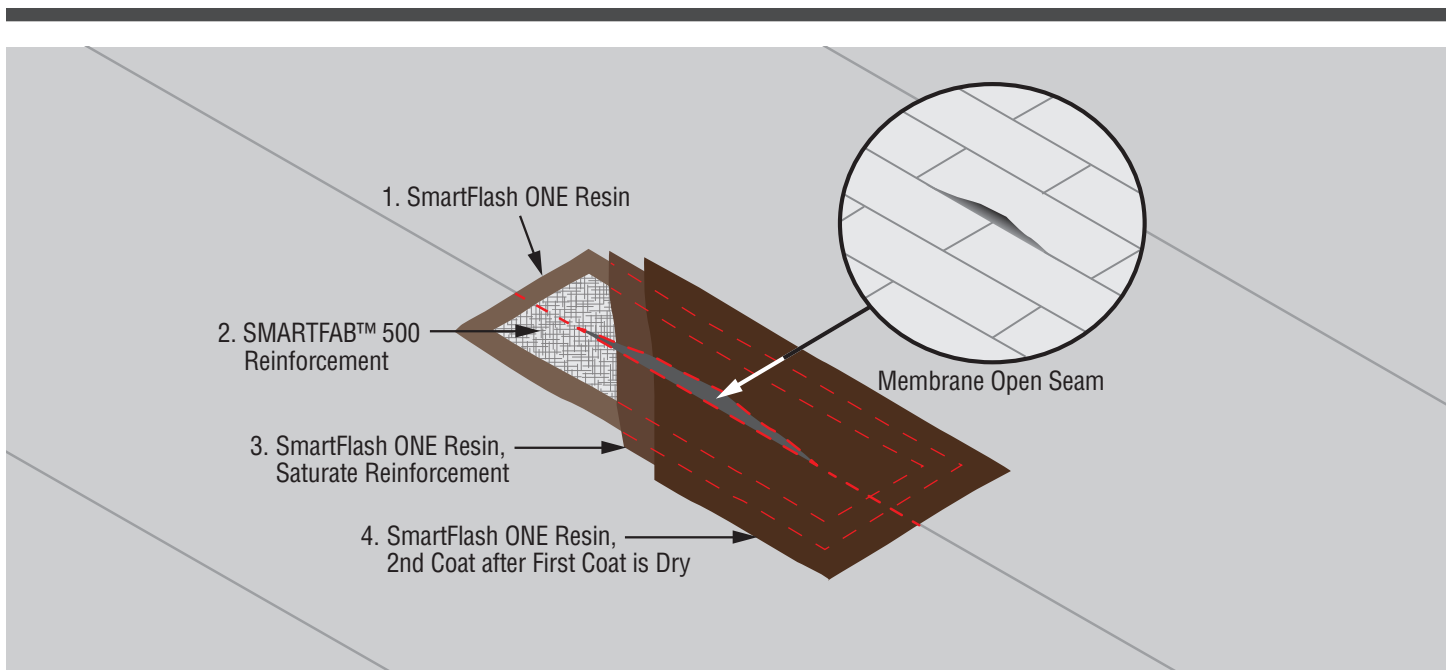

NOT DRAWN TO SCALE