

Installation Instructions Cedar Impressions® Bay Window Inside and Outside Cornerposts


These instructions describe and illustrate the steps involved in installing CertainTeed Bay Window Inside and Outside Cornerposts. Their purpose is to provide detailed information and how-to tips that will simplify the installation process. CertainTeed shall not accept any liability or responsibility under its written warranty for failure caused by application that does not meet our minimum requirements for proper installation. These requirements are outlined throughout the *CertainTeed Installation Guide (CTS205)*. Any deviations from these requirements should be approved in writing by CertainTeed Corporation.

Siding and accessories alone are not meant to be a watertight barrier. Before applying siding and accessories, make certain the substrate is watertight. Flash the substrate so that it sheds water outside the siding.


Cedar Impressions panels are installed from right to left. If the application situation allows, install both wall sides at the corner at the same time. This will allow you to make small corrections to the Bay Window Cornerposts installation as you move up the wall.

Installing Cedar Impressions Bay Window Cornerposts

1. When installing Bay Window Cornerposts, be sure to run Shingle Starter to both corners.
2. Install Cedar Impressions panels from right to left.
3. Install the Cedar Impressions panels into both the inside and outside cornerposts. Leave a 2.5" gap on each side of the corner.

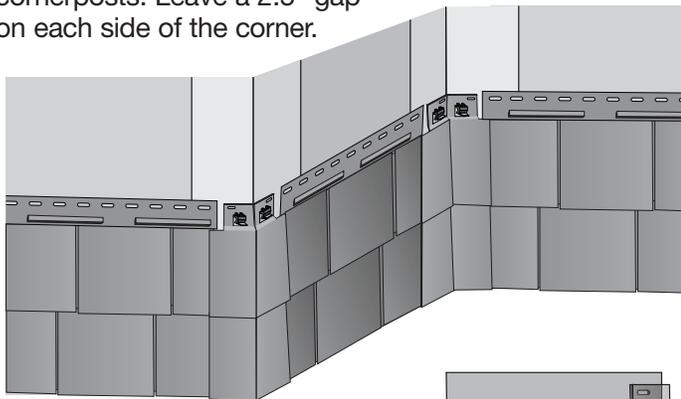

4. Once the panel has been fastened, hook the cornerposts over the siding, making sure they are locked into the starter strip.

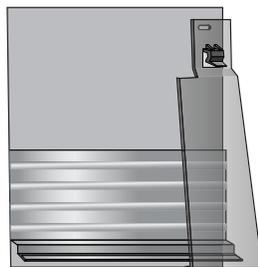

5. Nail through the top two holes of the Cornerpost.

6. Continue installing the Cornerpost as you move up the wall.

7. When you reach the top panel, cut the Cornerpost to length and nail it with a color matched finish nail.

If the Cornerposts are installed before the siding, you will have to cut the Cedar Impressions panel to fit.

8. Measure from the edge of the last installed panel to the edge of the Cornerpost.

9. Add 1-1/4" to this dimension, and cut the panel to length.

10. Angle the panel under the Cornerpost and slide it to the left until the side tabs clear.

11. Then slide the panel to the right until the correct temperature marks on the panel are lined up.

12. Fasten the panel to the wall.

If you have any questions about installing this product, please call us at 800-233-8990.

