
CertainTeed E

Installation Instructions Cedar Impressions® Half-Round Shingles under Soffits

These instructions describe and illustrate the steps involved in installing CertainTeed siding and trim. Their purpose is to provide detailed information and how-to tips that will simplify the installation process. CertainTeed shall not accept any liability or responsibility under its written warranty for failure caused by application that does not meet our minimum requirements for proper installation. These requirements are outlined throughout the CertainTeed Installation Guide (CTS205). Any deviations from these requirements should be approved in writing by CertainTeed Corporation.

The amount of trimming required for a Cedar Impressions® Half-Round Shingles panel determines the accessory piece required to receive it. See the descriptions below.

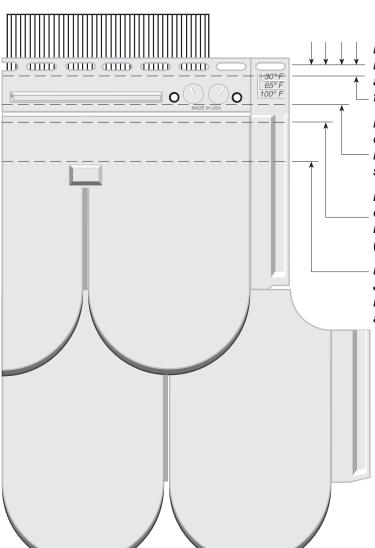

removal of nail flange up to the locking lug: requires drilling a new center hole, and punching a slot on both ends (16" from center); this allows for expansion

removal of 1-1/8" or more of nail flange: use cornice receiver or deluxe F-channel and cornice molding – drill a new center hole and punch a slot on both ends (16" from center)

removal of 1-1/2" or more: use either J-channel or cornice receiver and cornice molding – drill a new center hole, and punch a slot on both ends (16" from center)

removal of 3" or more: use standard 3/4" pocket J-channel or cornice receiver and cornice molding combinations – drill a new center hole, and punch a slot on both ends (16" from center)

If you have any questions about installing this product, please call us at 800-233-8990.