

CM

IN

Make sure your attic is in the  
**TrueComfort® Zone**

**R-60**

**R-50**

**R-40**

TrueComfort®  
Zone


**TrueComfort®**

CANADA

Blown-in Fibre Glass Insulation

**HOW MUCH INSULATION DO YOU NEED?**

Find your R-Value.

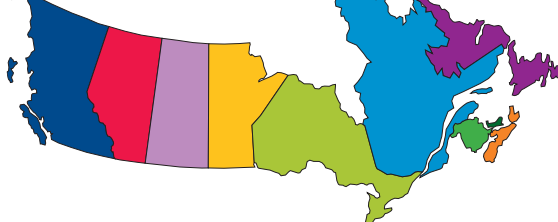

R-Value Recommendations*	
British Columbia	R-40 to R-51
Alberta	R-34 to R-50
Saskatchewan	R-34 to R-50
Manitoba	R-40 to R-50
Ontario	R-40 to R-50
Quebec	R-30 to R-50
New Brunswick	R-34 to R-50
Nova Scotia	R-34 to R-50
Prince Edward Island	R-34 to R-50
Newfoundland	R-34 to R-50

CertainTeed Recommendation

Using a staple gun, install attic rulers vertically across your attic every 250 square feet. Place ruler flat against rafter so that the bottom of the ruler is equal to the bottom of any existing insulation currently in your attic (touching ceiling drywall).

Blow insulation to the desired installed thickness using the rulers as your guide.

\*Savings vary.  
Higher R-values mean greater insulating power.  
Visit [certainteed.com/insulation](http://certainteed.com/insulation)

**CertainTeed**  
SAINT-GOBAIN

**ATTIC INSULATION RULER**

Code No. 30-26-125 © 10/10 CertainTeed Corporation

CM

IN

Assurez-vous que votre grenier se trouve dans la

# TrueComfort<sup>MD</sup> Zone

23

## R-60

22

55

21

50

20

Zone

## R-50

19

45

18

TrueComfort<sup>MD</sup>

40

16

## R-40

15

35

14

30

12

# TrueComfort<sup>MD</sup>


CANADA

Soufflé dans l'isolation en Fibre de Verre

## QUELLE QUANTITÉ D'ISOLANT AVEZ-VOUS BESOIN?

AVEZ-VOUS BESOIN?

Trouvez votre valeur R.

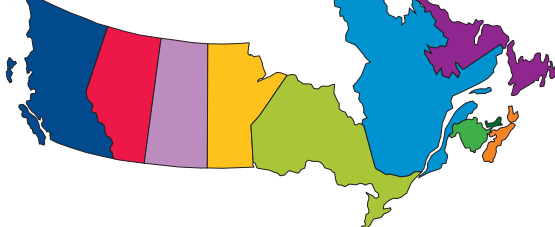

Recommandations pour la valeur-R*	
Colombie-Britannique	R-40 to R-51
Alberta	R-34 to R-50
Saskatchewan	R-34 to R-50
Manitoba	R-40 to R-50
Ontario	R-40 to R-50
Québec	R-30 to R-50
Nouveau-Brunswick	R-34 to R-50
Nouvelle-Écosse	R-34 to R-50
Île-du-Prince-Édouard	R-34 to R-50
Terre-Neuve-et-Labrador	R-34 to R-50

Recommandation CertainTeed

À l'aide d'une agrafeuse, installez les règles de grenier verticalement à travers votre grenier tous les 250 pieds carrés. Placez la règle à plat contre le chevron afin que le bas de la règle soit égal au bas de n'importe quelle isolation existante en ce moment dans votre grenier (pour qu'elle touche à cloison sèche du plafond). Soufflez l'isolant à l'épaisseur installée désirée en utilisant vos règles comme guide.

\* Les économies varient. Des valeurs R plus élevées signifient une puissance d'isolation supérieure.

Visitez [certainteed.com/insulation](http://certainteed.com/insulation)

# CertainTeed

SAINT-GOBAIN

RÈGLE POUR L'ISOLATION DES GRENIERS

N° de code. 30-26-125 © 010/10 CertainTeed Corporation